






control TV+

IT GUIDA RAPIDA
Inserire il CODICE per programmare il tuo dispositivo.

FR GUIDE DE DÉMARRAGE RAPIDE
Pour activer la télécommande entrez un code ou lancez une recherche automatique. Pour découvrir l'ensemble de nos services en ligne, **scannez le QR code**.

EN QUICK GUIDE
Insert the programming CODE for your device.

ES GUÍA RÁPIDA
Introduzca el CÓDIGO de programación de su dispositivo.

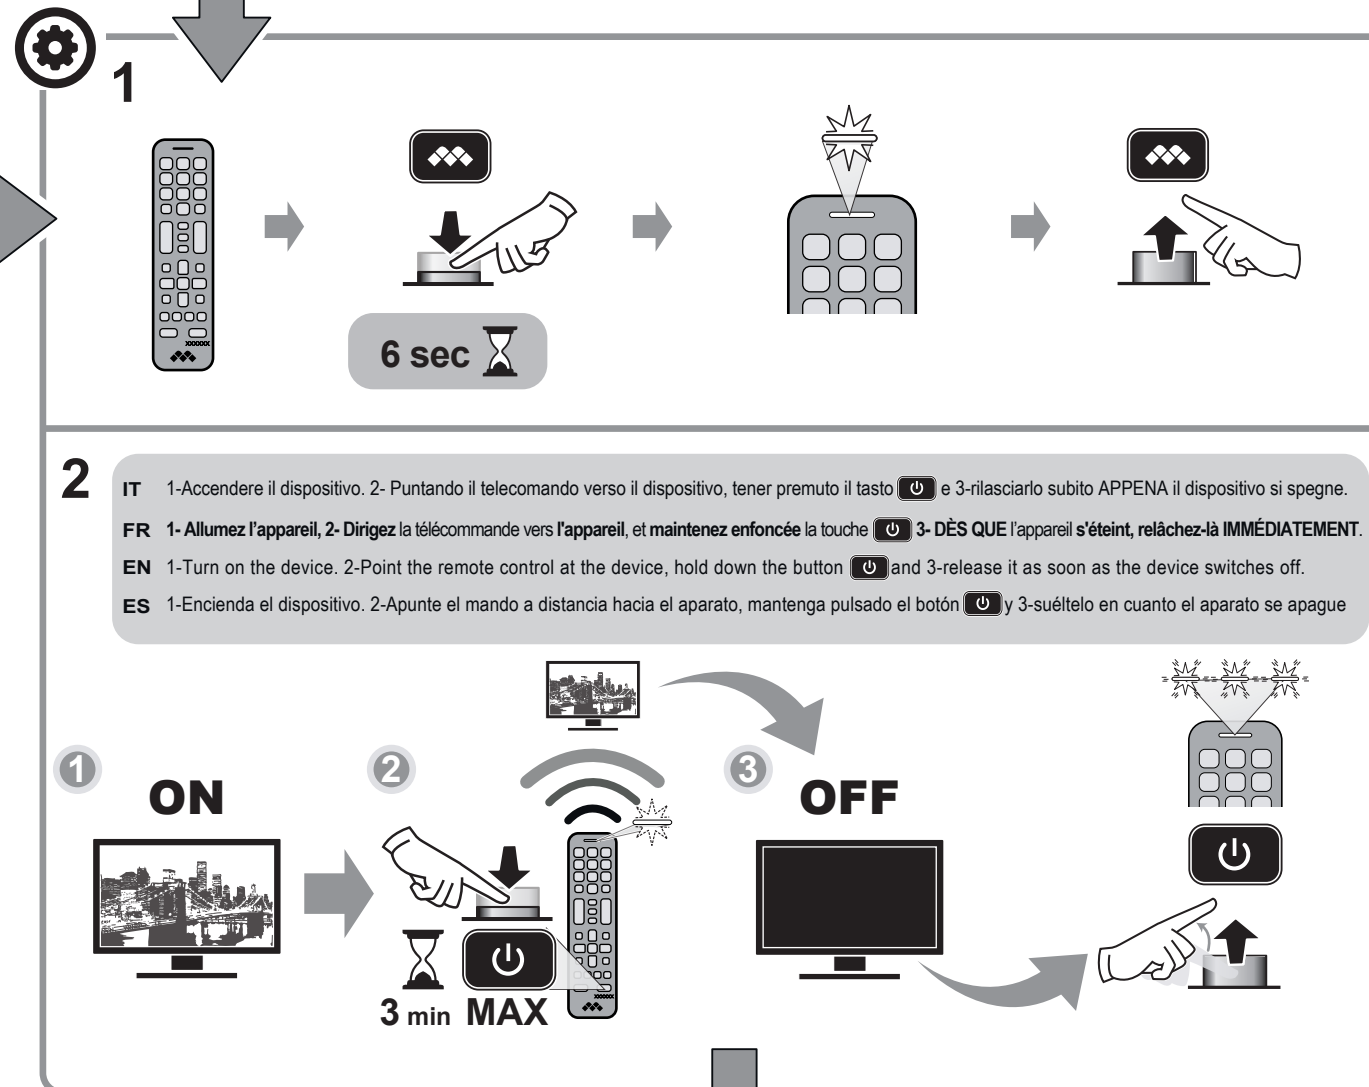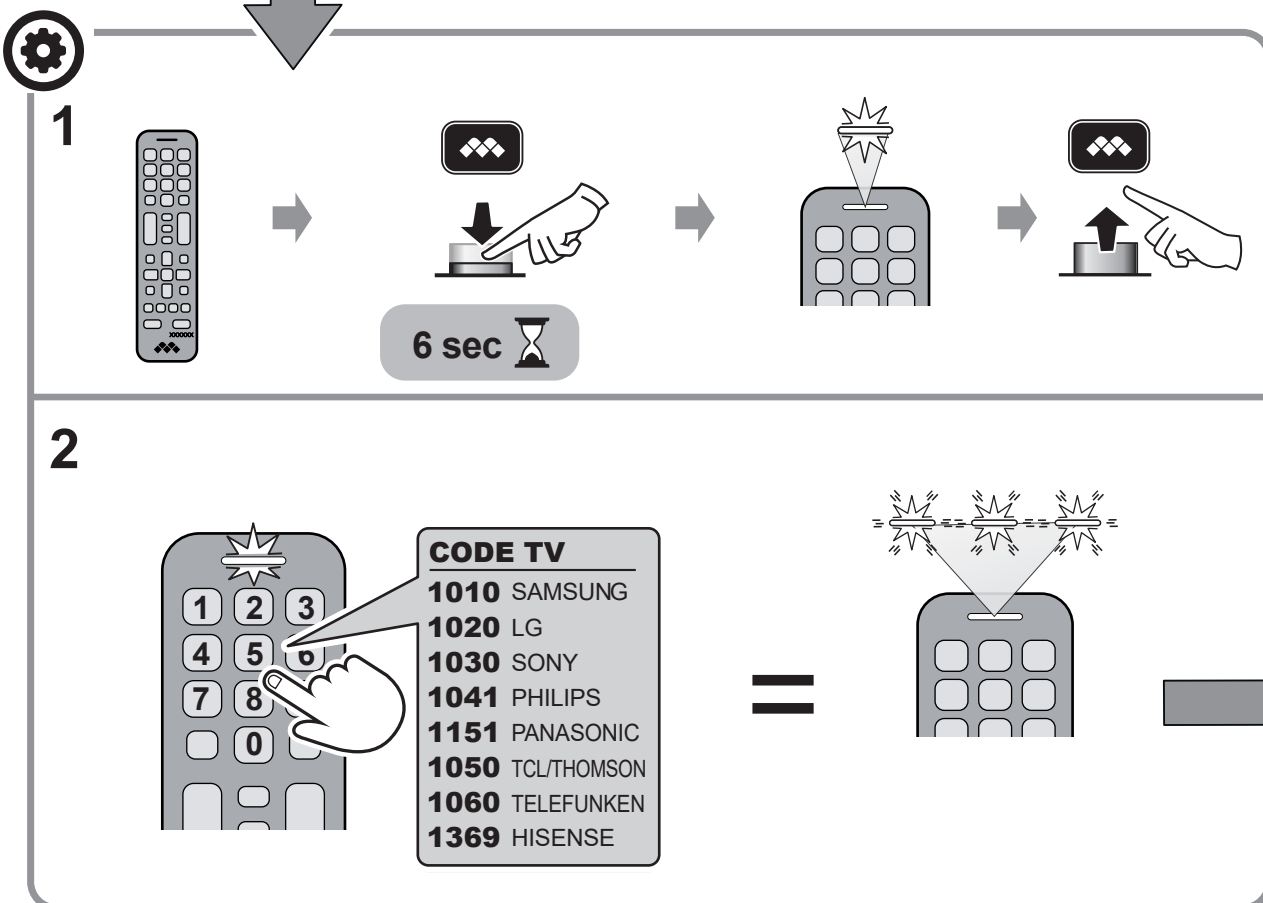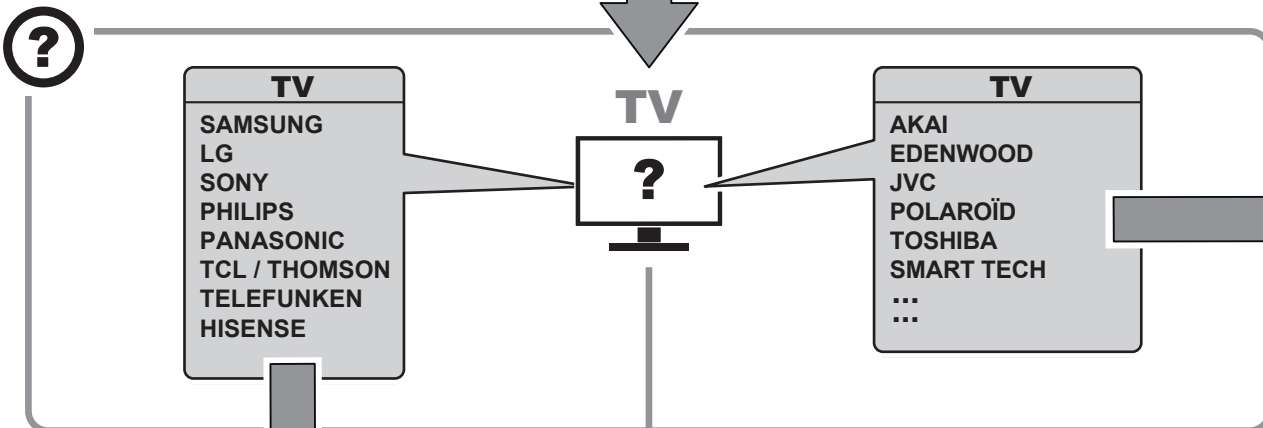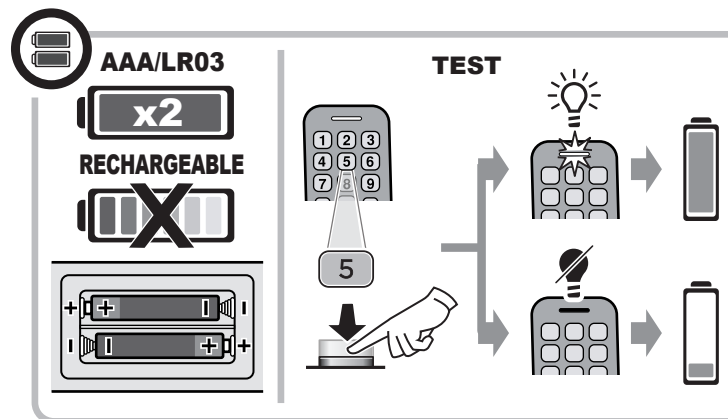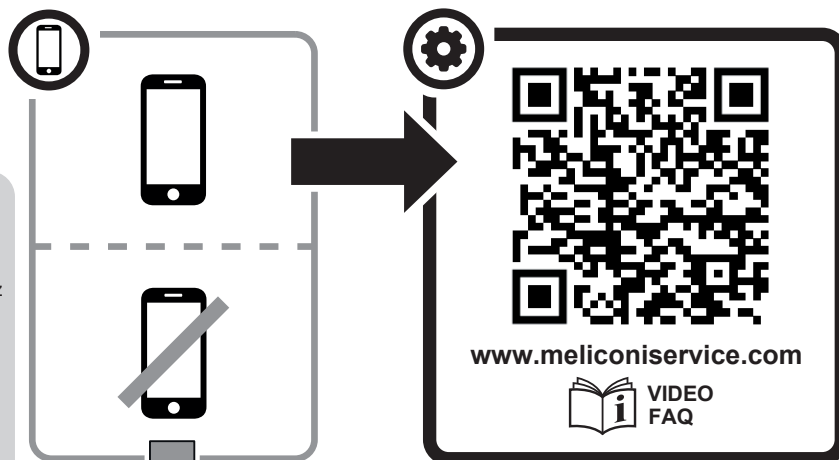


IT Verificare che i tasti funzionino correttamente. In questo caso la programmazione del vostro telecomando è terminata.

FR Vérifier que toutes les touches fonctionnent correctement. Si oui, la programmation de votre télécommande est terminée.

EN Check that the keys work correctly. If so, your remote control has been programmed.

ES Compruebe que las teclas funcionen correctamente. De ser así, su control remoto ha sido programado.

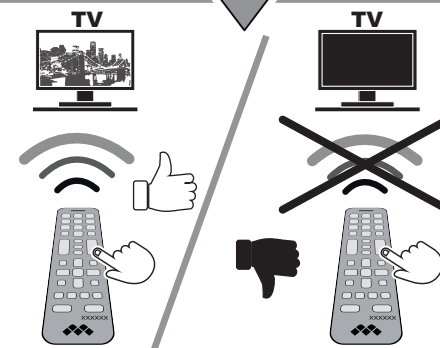

IT Se alcuni tasti non funzionano, ripetere la procedura anche più volte per trovare un codice migliore.

FR Si toutes les touches ne fonctionnent pas correctement, répétez la procédure jusqu'à trouver le bon code.

EN If some keys do not work properly, repeat the procedure until the correct code is found.

ES Si alguna tecla no funciona correctamente, repita el procedimiento hasta encontrar el código correcto.

